



Printer Settings

HP Printer Settings

The four critical settings are the same for both the 5000 and 5100 Series HP Printers

Configure Fuser Mode Menu YES
Cardstock HIGH
Resolution ProRes 1200
Toner Density 1

Xante Platemaker Settings

Platemaker 3	Setting	Platemaker 4
4	EP1	17
7	EP2	n/a
3	Density	3
9	Fuser*	9
3	Gamma	3
Fully Closed	Toner Wheel	Fully Closed
Low to Medium	Toner Level	Low to Medium
1200	DPI**	1200

* If run length achieved is too short, increase Fuser figure by one step at a time until desired results are achieved.

** For optimum results DPI should be set to 1200

Distributed exclusively by

